


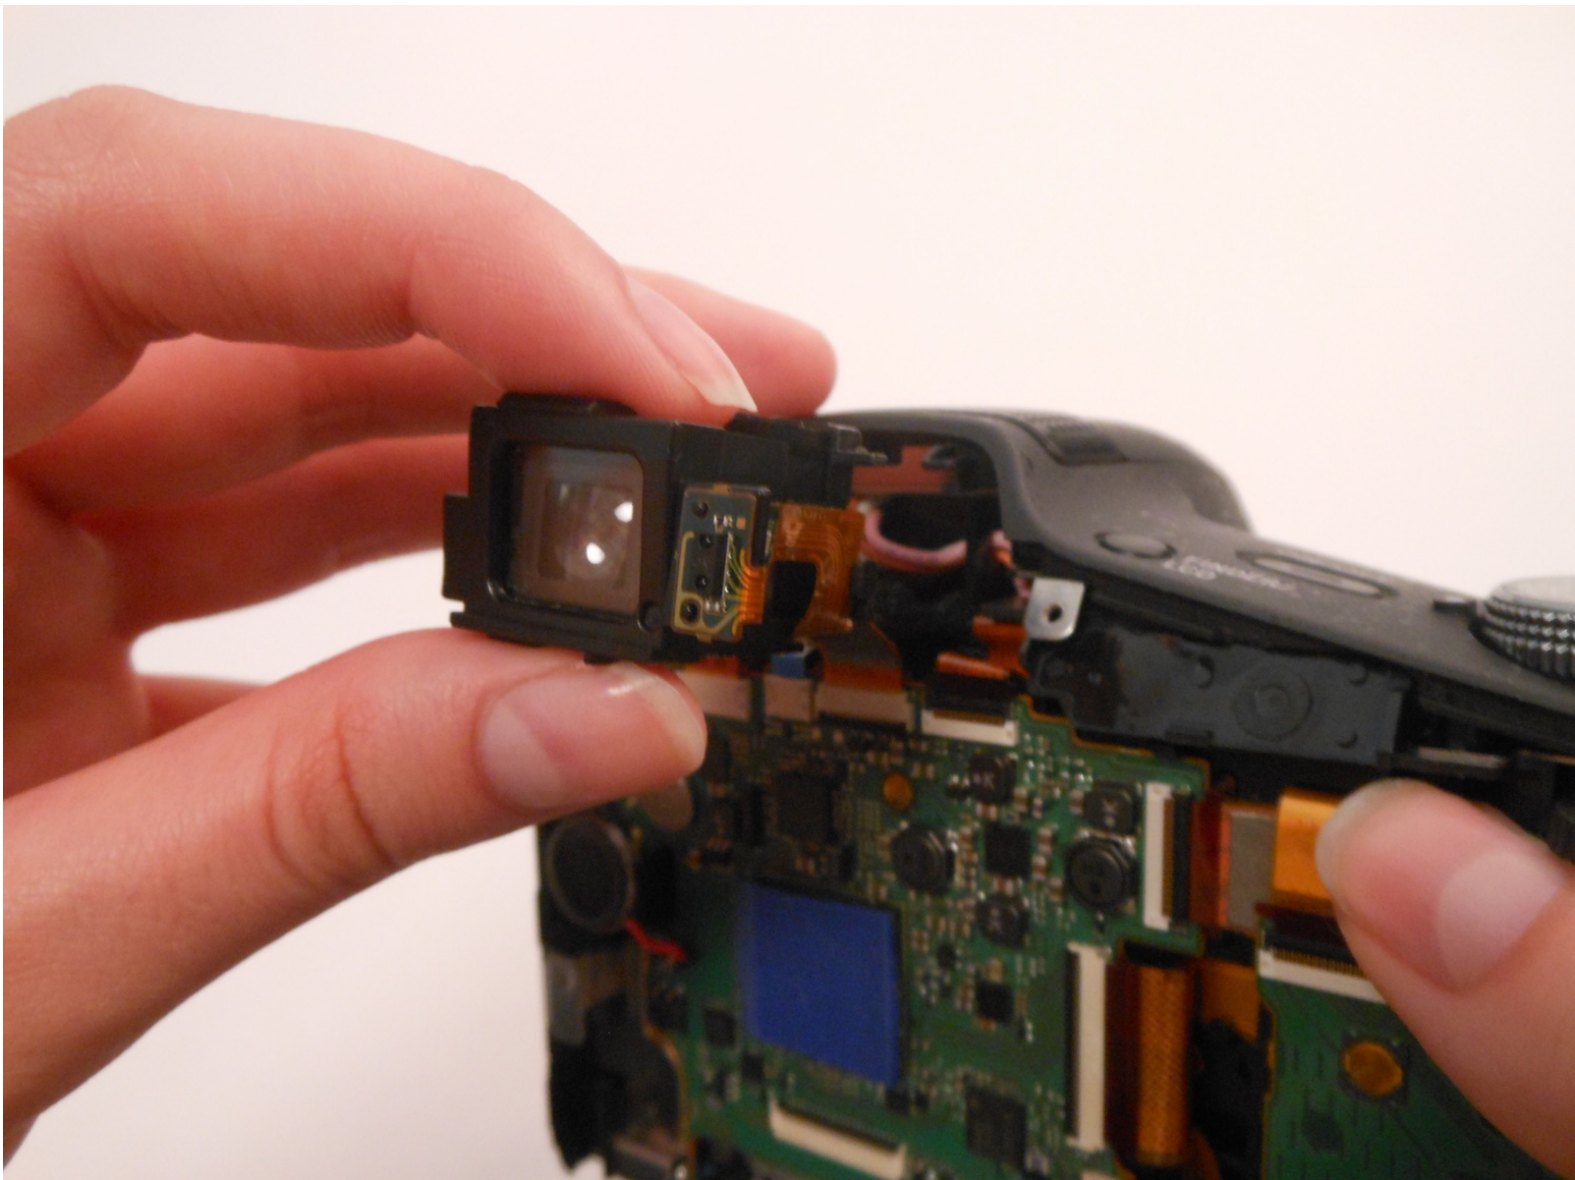

# Sony Cyber-shot DSC-HX100V Viewfinder Replacement

This guide will provide 6 easy-to-follow steps that will display how to replace the viewfinder of a Sony Cyber-shot HX100V.

Written By: DaQuawn



## INTRODUCTION

If you have a faulty viewfinder and would like to know how to replace it yourself, this guide will show you how to do just that. By following these 6 simple steps, you will have your camera repaired within a few minutes and you will also save a couple of bucks.




### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [Spudger](#) (1)
-


## Step 1 — Viewfinder



- **Make sure camera is turned off.**
  - Press the ON/Off button to turn off the camera.
-  **WARNING:** Data may be lost if the camera remains on.

## Step 2



 Use the Phillips screwdriver size #00 to remove the 1.59mm #00 screws.

- Remove 2 screws from the side of the camera.
- Remove 4 screws on the bottom of the camera.
- Remove 1 screw next to the eyepiece.



### Step 3




- Flip the screen back to reveal 2 hidden screws.
- Remove the two 1.59mm #00 screws on the left with the Phillips #00 screwdriver.

### Step 4






- Pull the back panel of the camera upward.
- ⓘ Use a spudger to help pry open the back panel.

## Step 5

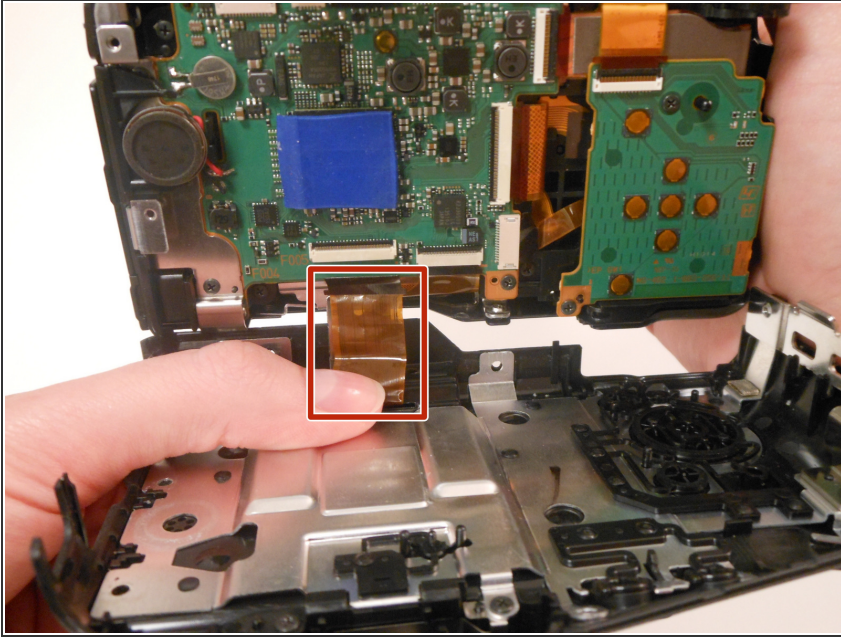

- Open the back panel to view the inside of the camera.
- ★ If the orange ribbon cable disconnects from its designated port, do not panic. The cable is easy to reinsert.

## Step 6

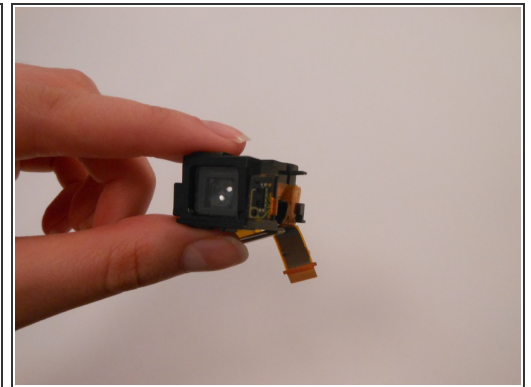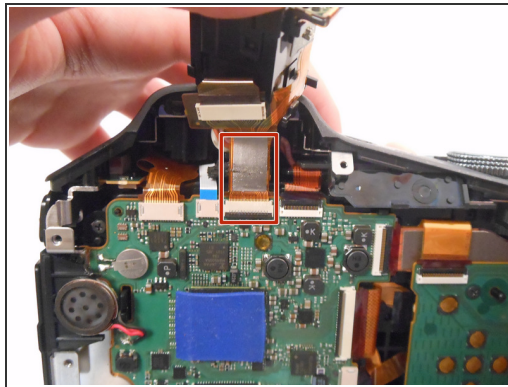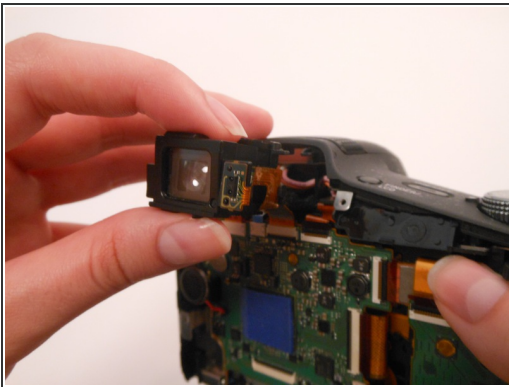

- Carefully pull out the the eyepiece.
- Detach the orange ribbon cable that connects it to the green panel by carefully pulling outwards.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 08:38:56 PM.